


Operating instruction

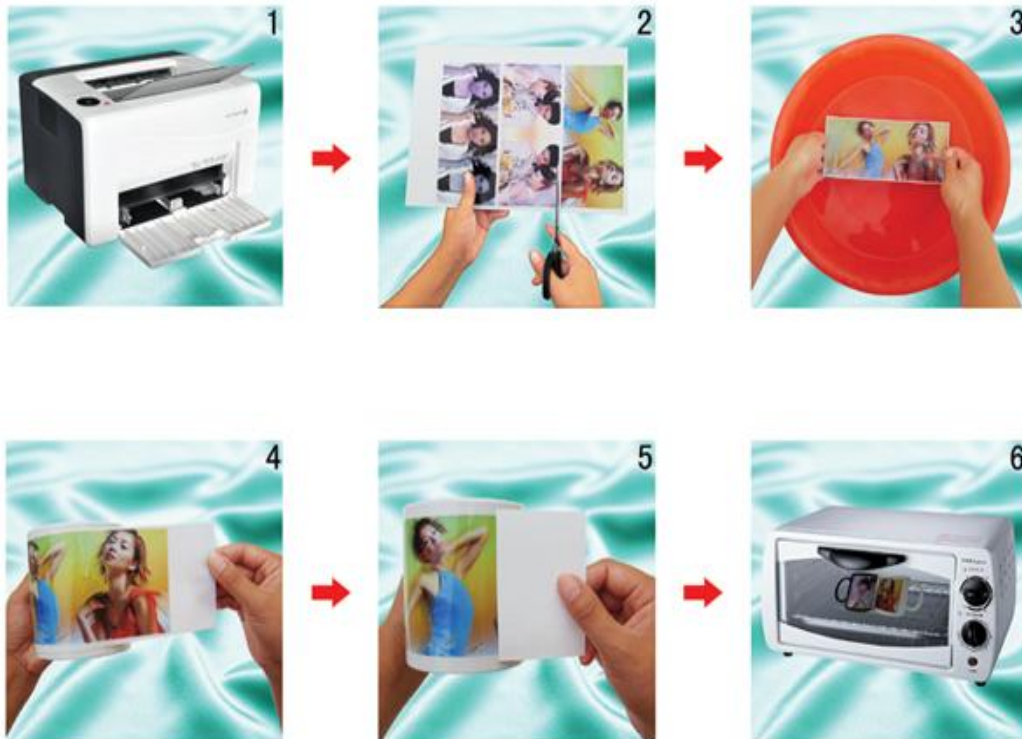

1. Printout the picture according to the photo parameters; the mirror side is the printing surface.
2. Cut it along the periphery by 1 mm from the pattern.
3. Soak it in water for about 30 ~ 60 seconds, and the transfer film can slide fully and naturally with the base paper.
4. Slowly pull out the base paper so that the transfer film is attached to the product surface.
5. Use cards discharge the bubble and water in the film sufficiently, and then dry the surface by absorbent paper.
6. Bake it in the oven for 10~15 minutes at the temperature of 100~110 ,or dry it by nature for 1~3 days.